

Additional Resources: Product Page

date 09/12/2024

page 1 of 9

SERIES: AMT13 | DESCRIPTION: MODULAR INCREMENTAL ENCODER

FEATURES

- patented capacitive ASIC technology
- · low power consumption
- · incremental resolutions up to 4096 PPR
- resolutions programmable with AMT Viewpoint™ PC software
- · differential line driver versions
- digitally set zero position
- compact modular package with locking hub for ease of installation
- · radial and axial cable connections
- -40~125°C operating temperature







ELECTRICAL

parameter	conditions/description	min	typ	max	units
power supply	VDD	4.5	5	5.5	V
start-up time ¹			200		ms
current consumption	with unloaded output		16		mA
single ended channels	output high level output low level output current (per channel) rise/fall time	VDD-0.1	8	0.1 15	V V mA ns
differential channels	output high level output low level output current (per channel) rise/fall time	3	11	0.1 25 20	V V mA ns

Note: 1. Encoder must be stationary during start-up.

INCREMENTAL CHARACTERISTICS

parameter	conditions/description		min	typ	max	units
channels	CMOS Voltage (S) Quadrature Line Driver (Q)	A, B, Z A, Ā, B, Ē, Z, Ž				
waveform	CMOS voltage square wave					
phase difference	A leads B for CCW rotation (viewed	from front)				
quadrature resolutions ²	48, 96, 100, 125, 192, 200, 250, 256 512, 768, 800, 1000, 1024, 1600, 20				PPR	
index ³	one pulse per 360 degree rotation					
accuracy				0.2		degrees
quadrature duty cycle (at each resolution)	48, 96, 100, 125, 192, 256, 384 200, 250, 360, 400, 768, 800 500, 1000, 1600 512, 1024 , 2048, 4096 2000 2500		49 48 46 50 44 43	50 50 50 50 50 50	51 52 54 50 56 57	% % % %

2. Resolutions programmed with AMT Viewpoint™ PC software. Default resolution set to 2048 PPR. Listed as pre-quadrature, meaning final number of counts is PPR x 4.

3. Zero position alignment set with AMT One Touch Zero™ module, AMT Viewpoint™ PC software, or serial commands

MECHANICAL

parameter	conditions/description	min	typ	max	units
motor shaft length		13.5			mm
motor shaft tolerance			NOM +0/-0.015	j	mm
weight	weight varies by configuration		26		g
axial play				±0.3	mm
hub set screw to shaft torque	set screw size: M2.5x0.45		3		in-lb
rotational speed (at each	48, 96, 100, 125, 192, 200, 250, 256, 384, 400, 500, 512, 800, 1000, 1024, 2048			8000	RPM
resolution)	360, 768, 1600, 2000, 4096			4000	RPM
	2500			2500	RPM

ENVIRONMENTAL

parameter	conditions/description	min	typ	max	units
operating temperature		-40		125	°C
humidity	non-condensing			85	%
vibration	10~500 Hz, 5 minute sweep, 2 hours on each XYZ			5	G
shock	3 pulses, 6 ms, 3 on each XYZ			200	G
RoHS	yes				


SERIAL INTERFACE

parameter conditions/description		min	typ	max	units
protocol serial UART					
controller	Driven by onboard Microchip PIC18F25K80. See Microchip documentation for additional details.				
data rate	8 data bits, no parity, 1 stop bit, least significant bit first		115200		baud

WAVEFORMS

Figure 1

Quadrature signals with index showing counter-clockwise rotation

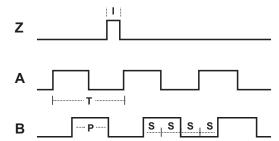


The following parameters are defined by the resolution selected for each encoder. The encoders resolution is listed as Pulses Per Revolution (PPR), which is the number of periods (or high pulses) over the encoders revolution.

Parameter	Description	Expression	Units	Notes
PPR	resolution		Pulses Per Revolution	This is the user selected value and the format all resolutions are listed in
CPR	counts	PPR x 4	Counts Per Revolution	This is the number of quadrature counts the encoder has
Т	period	360/R	mechanical degrees	
Р	pulse width	T/2	mechanical degrees	
S	A/B state width	T/4	mechanical degrees	This is the width of a quadrature state
I	index width	T/4	mechanical degrees	The width of a once per turn index is the state width for A & B lines

Note: For more information regarding PPR, CPR, or LPR (Lines Per Revolution) view https://www.sameskydevices.com/blog/what-is-encoder-ppr-cpr-and-lpr

PART NUMBER KEY


For customers that prefer a specific AMT13 configuration, please reference the custom configuration key below.

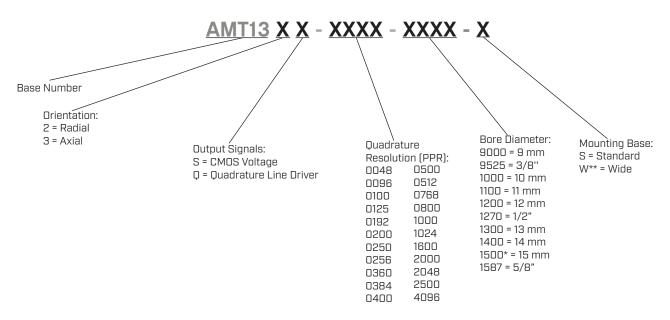


^{*15} mm bore diameter option only available as custom configuration.

AMT13-V KITS

In order to provide maximum flexibility for our customers, the AMT13 series is provided in kit form standard. This allows the user to implement the encoder into a range of applications using one sku#, reducing engineering and inventory costs. AMT13 kit includes all items shown below.

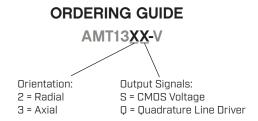

SHAFT ADAPTERS							
9 mm	3/8 in	10 mm	11 mm	12 mm	1/2 in	13 mm	14 mm
Light Blue	Orange	Purple	Gray	Yellow	Green	Red	Blue

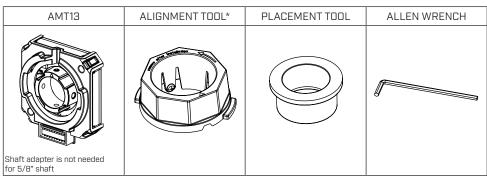


^{*}Alignment Tool comes pre-installed on all AMT13 Series.

^{**}Wide base not included in kits.

ENCODER INTERFACE


	CONNECTOR PINOUT						
		Functio	n				
#	AMT132S	AMT133S	AMT132Q	AMT133Q			
1	RX_ENC+	RX_ENC+	RX_ENC+	RX_ENC+			
2	TX_ENC+	TX_ENC+	TX_ENC+	TX_ENC+			
3	NA	N/A	N/A	N/A			
4	GND	GND	GND	GND			
5	N/A	N/A	N/A	N/A			
6	+5 V	+5 V	+5 V	+5 V			
7	N/A	N/A	N/A	N/A			
8	A+	A+	A+	A+			
9	N/A	N/A	A-	A-			
10	B+	B+	B+	B+			
11	N/A	N/A	B-	B-			
12	Z+	Z+	Z+	Z+			
13	N/A	N/A	Z-	Z-			
14	MCLR	MCLR	MCLR	MCLR			
15	N/A	N/A	N/A	N/A			
16	N/A	N/A	N/A	N/A			
17	N/A	N/A	N/A	N/A			
18*	NOISE GND	NOISE GND	NOISE GND	NOISE GND			


^{*}Pin 18 is not connected internally for standard encoders. Contact Same Sky for support with high noise applications.

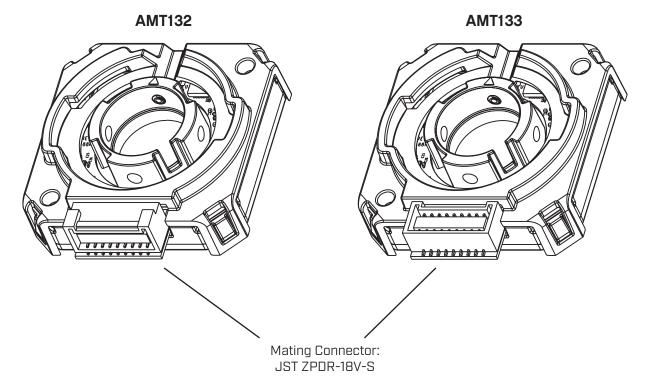



MECHANICAL DRAWING


units: mm tolerance: X.XX ±0.25 mm hole dia: ±0.08 mm

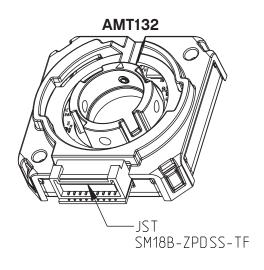


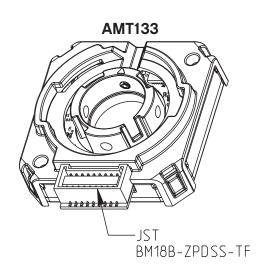

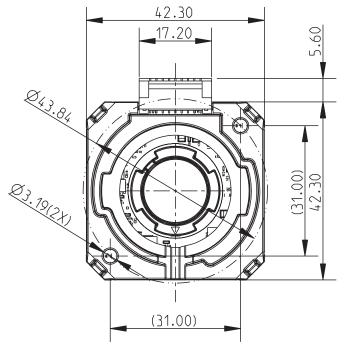

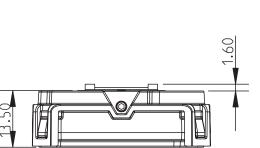




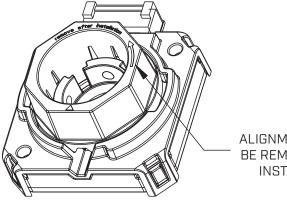


ALIGNMENT TOOL TO BE REMOVED AFTER INSTALLATION

MECHANICAL DRAWING (WIDE BASE)


units: mm tolerance: X.XX ±0.25 mm hole dia: ±0.08 mm

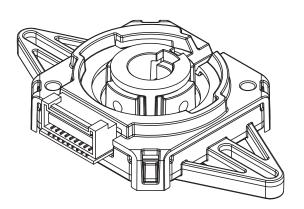

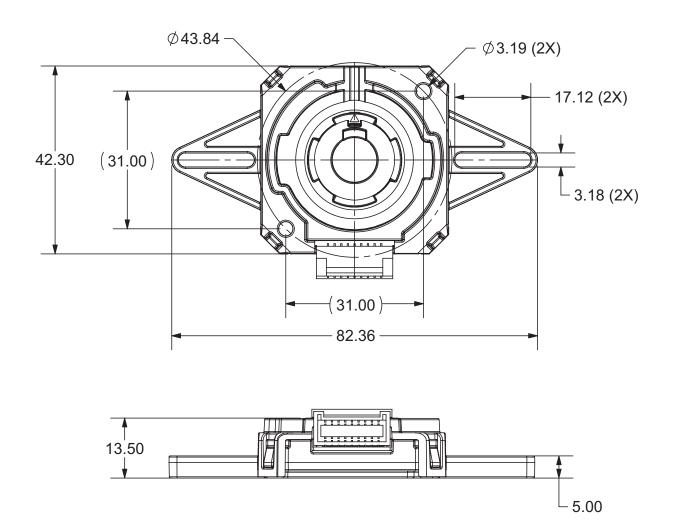


ASSEMBLY PROCEDURE

STEP 1

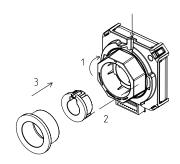


- 1. Begin by rotating the pre-installed alignment tool clockwise and completely to the right so that the pre-installed shaft set screw is visible.
- Select the appropriately sized shaft adapter and insert it into the encoder making sure the adapter is properly aligned with the keyway in the metal hub. No adapter is needed for a 5/8" motor shaft.
- 3. Select the placement tool and insert it into the encoder. This placement tool holds the encoder's hub and shaft adapter in the proper position for installation onto the motor shaft.

STEP 2

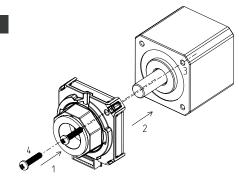


- 1. Slide the encoder onto the motor shaft applying force only to the placement tool to maintain proper alignment of the encoder's hub and shaft adapter.
- 2. Press until the encoder sits flush with the motor body.
- 3. Once in contact with the motor body, rotate the encoder until the mounting holes are aligned with the proper bolt circle.
- 4. Insert screws and fasten the encoder to the motor.

STEP 3

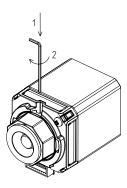

- 1. Insert the Allen Wrench into the notch on the top.
- $\textbf{2.} \ \mathsf{Tighten} \ \mathsf{the} \ \mathsf{shaft} \ \mathsf{set} \ \mathsf{screw} \ \mathsf{to} \ \mathsf{the} \ \mathsf{recommended} \ \mathsf{torque} \ \mathsf{settings} \ \mathsf{per} \ \mathsf{the} \ \mathsf{spec}.$

STEP 4

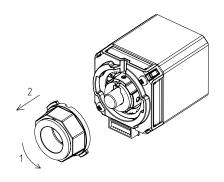

- Rotate the placement tool and alignment tool counterclockwise until the tabs align with the openings.
- 2. Remove both tools from the encoder.
- $\begin{tabular}{ll} \bf 3. \ When \ installation \ is \ finished, the \ motor \ shaft \ should \ be \ rotating \ freely. \end{tabular}$

APPLICATION NOTES

SERIAL INTERFACE

The AMT13 series encoder is designed to operate with a serial UART interface. This interface allows the encoder to be configured and programmed by the AMT Viewpoint $^{\text{IM}}$ application. Along with programming, the AMT Viewpoint $^{\text{IM}}$ application uses the serial interface for diagnostics and index alignment. Below are instructions on how to use the serial interface for position zeroing.

Table 1Serial Commands


Command	Action	Use
0	This command sends an ascii 'O' (hex value 0x30).	This zeros the encoder and sets the index at the current angular position. This position is stored in non-volatile memory and will remain present until a zero command is set again or encoder is reprogrammed via AMT Viewpoint™.
Q	This command sends an ascii 'Q' (hex value 0x51).	This command restarts the encoder as if it were power cycled.

Table 2Serial Pins

Pin	Description	Connection
TX_ENC+	This is the pin that the encoder transmits serial data on.	Connect this pin to the receiver input of your serial/UART interface.
RX_ENC+	This is the pin that the encoder receives serial commands on.	Connect this pin to your serial/UART interface transmitter output.
MCLRB	This pin is used to force the encoder into reset for reprogramming via the AMT Viewpoint™ application.	Connection of this pin is not required for the above serial commands.

The serial interface operates at 115200 baud with 8 data bits, no parity, and 1 stop bit, and 1 start bit. This is the standard UART protocol. Data lines TX_ENC+ and RX_ENC+ are high when inactive.

Figure 2
Serial Timing Diagram

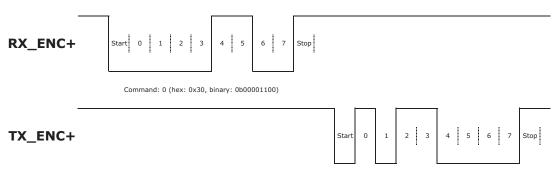

Response: \r (hex: 0x0d, binary: 0b10110000)

REVISION HISTORY

rev.	description	date
1.0	initial release	06/21/2019
1.01	brand update	10/04/2019
1.02	updated quadrature duty cycle details	10/08/2020
1.03	added motor shaft tolerance details, updated start-up details	09/10/2021
1.04	logo, datasheet style update	08/05/2022
1.05	added wide base version	01/17/2023
1.06	CUI Devices rebranded to Same Sky	09/12/2024

The revision history provided is for informational purposes only and is believed to be accurate.



Same Sky offers a one (1) year limited warranty. Complete warranty information is listed on our website.

Same Sky reserves the right to make changes to the product at any time without notice. Information provided by Same Sky is believed to be accurate and reliable. However, no responsibility is assumed by Same Sky for its use, nor for any infringements of patents or other rights of third parties which may result from its use.

Same Sky products are not authorized or warranted for use as critical components in equipment that requires an extremely high level of reliability. A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.